

MYNDPLAY BrainBand

Quick Start Guide

System requirements:

- OS: Windows XP/Vista/7/Mac OS
- Processor: Intel Core 2 Duo or higher
- Memory: 1GB RAM or more
- HDD: 500MB or more
- 1xUSB port
- MyndPlay player (free download from myndplay.com)


Power On/Off & Charge

Power On / Pairing mode	Press and hold power button for approximately 5 seconds. The Blue LED will flash rapidly
Power off	Press and hold Power button for approximately 5 seconds.
Charge	You'll need to charge your BBXL Unit battery for a minimum of 4 hours using the included charging cable. Plug the Mini USB charging cable into the charging port on your BBXL Unit and the other side of charging cable into PC or charger.
Paired	The Blue LED flash slow.
Charging	The Blue LED turns on.
Charged	The Blue LED turns off.


BrainBand Contents

- BBXL Main Unit
- Breathable BioPreme Antibacterial Band
- Ear Clip
- USB Charging Cable
- Sensor Cable
- Velcro Dots for the Main Unit

Please stick on the dots to the base of the BBXL Main Unit and Fully Charge the unit before first use.

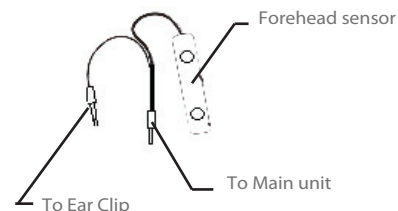

BrainBand Explained

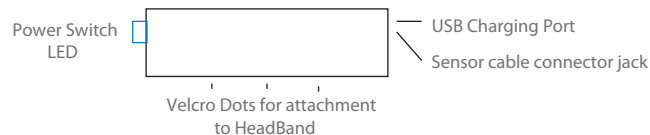

Quick tips

1. Use the BrainBand with a fully charged battery for best connection.
2. Do not charge whilst using BrainBand.
3. Please re-charge, if necessary.
4. Please keep clean and dry
5. BrainBandXL works with all NeuroSky compatible apps.

Set up Bluetooth for Windows with a BT Dongle

To set up a Bluetooth dongle, you need to do two things:

1. Add a Bluetooth adapter to your computer.

Plug the dongle into a USB port. (If a Bluetooth adapter is already built in or attached to your computer, ignore this step.)

2. Install the dongle.

To install dongle, you can use Bluetooth dongle in Control Panel. If you have Bluetooth wireless technology installed on your computer, follow these steps:

To install a Bluetooth enabled device

- a. Click the "Start" button, click "Control Panel", click "Devices and Printers", and then click "Bluetooth Devices."
- b. Click "Add", and then follow the instructions. please make sure your device is turned on at this point.
- c. Click "BrainBand XL" from the list of found devices
- d. Click Enter the device's pairing code.
- e. Enter 0000 and click Next

<http://windows.microsoft.com/en-US/windows-vista/Set-up-a-Bluetooth-enabled-device>

Set up Bluetooth for Mac OS

1. Enable Bluetooth. Under "System Preferences" click the Bluetooth icon and make sure you see "Bluetooth On" under the "Settings" tab. If it's not turned on, click "Turn Bluetooth On."
2. Go to the menu bar and click the Bluetooth icon, then click "Bluetooth Preferences."
3. Click the "Devices" tab and "Pair New Device."
4. Click on the "BrainBandXL." If it is not listed, make sure the BBXL is turned on and in pairing mode. Then click "Search Again" in the "Bluetooth Device" dialog box.
5. Click on "Pair"
6. Enter 0000 into the box that pops up. Click "OK" and the B-Cube should be listed in the "Devices" tab under "Bluetooth Preferences."

Upon completion of Hardware setup please goto www.myndplay.com to download the latest version of the MyndPlay player as well as movies and video apps of your choice

Using MyndPlay

Download content from <http://www.myndplay.com>

Please Unzip and place mpy and video file in the same folder.

Run MyndPlay

Once you are happy with meter orientation click continue

(you can come back to this anytime by clicking the headset icon in the toolbar)



Click to select Interactive Video file

